Hill-Rom®

A HILLENBRAND INDUSTRY

THERAPY PRODUCT MAINTENANCE GUIDE

NEXT PAGE

Exit

Therapy Products

- ACUCAIR® Continuous Airflow System
- FLEXICAIR ECLIPSE® Low Airloss Therapy
- PRIME•AIRE® Therapy Surface
- Duo Deteq™ Alternating Therapy System
- V-CUE® Dynamic Air Therapy® Unit
- MAGNUM® Bariatric Patient Care System with or without the FLEXICAIR ECLIPSE *Ultra*® Low Airloss Therapy System
- ZoneAire® Sleep Surface
- TotalCare SpO_2RT™ Pulmonary Therapy System
- TotalCare SpO_2RT™ Pulmonary Therapy System Rotation or Percussion/Vibration Modules

Exit

ACUCAIR®
Continuous Airflow System

- Set-up Procedures and Processes
- Removal Procedures
- Between Patient Procedures
- Troubleshooting

FLEXICAIR ECLIPSE®
Low Airloss Therapy Unit

- Set-up Procedures and Processes
- Removal Procedures
- Between Patient Procedures
- Troubleshooting

PRIME•AIRE® Therapy Surface

- Set-up Procedures and Processes
- Removal Procedures
- Between Patient Procedures
- Troubleshooting

Duo-Deteq®
Alternating Therapy System

- Set-up Procedures and Processes
- Removal Procedures
- Between Patient Procedures
- Troubleshooting

V-CUE®
Dynamic Air Therapy® Unit

- Set-up Procedures and Processes
- Removal
- Between Patient Procedures
- Troubleshooting

MAGNUM® II
Bariatric Patient Care System

- Set-up Procedures and Processes
- Removal Procedures
- Between Patient Procedures
- Troubleshooting

ZoneAire® Sleep Surface

- Set-up Procedures and Processes
- Removal Procedures
- Between Patient Procedures
- Troubleshooting

TotalCare SpO_2RT^{TM} Pulmonary Therapy System

- Set-up Procedures and Processes
- Removal Procedures
- Between Patient Procedures
- Troubleshooting

TotalCare SpO_2RT^{TM} Pulmonary Therapy System Rotation or Percussion/Vibration Modules

- Installation Procedures
- Removal Procedures

PRIME•AIRE® Therapy Surface Set-up Process

- Unfold the mattress, and orient the air hoses toward the foot of the bed where you will be placing the control unit.
- Hang the control unit on the footboard of the bed, or place it on the floor in a safe, out-of-the-way area.
- Plug the mattress tubing assembly valves into the bottom of the control unit.
- Route the power cord to ensure that it is **not** in an area that could cause tripping of personnel, cutting of the power cord by equipment or casters rolling over it, or improper disconnection from its power source. Failure to do so could result in personal injury, patient injury, or damage to the power cord.

MORE

PRIME•AIRE® Therapy Surface Set-up Process (continued)

- Plug the unit into an appropriate power source. Use caution when working with electricity. Failure to do so could result in personal injury or equipment damage.
- Turn the main circuit breaker on the lower right side of the control unit to the **On** position.
- Using the **Set Patient Weight** button, set the controller assembly to run at a therapy level appropriate for the patient's weight.

BACK

ACUCAIR® Continuous Airflow System Set-up Process

- Position the mattress overlay on the existing bed mattress, and secure the mattress overlay to the frame using the two straps provided. Failure to properly secure the mattress overlay could result in patient injury due to falling.
- Hang the air supply unit on the footboard of the bed, or place it on the floor in a safe, out-of-the-way area to ensure that it is **not** in an area that could cause tripping of personnel.
- Connect the hose assembly to the exhaust output of the unit and the mattress.

MORE

ACUCAIR® Continuous Airflow System Set-up Process (continued)

- Route the power cord to ensure that it is **not** in an area that could cause tripping of personnel, cutting of the power cord by equipment or casters rolling over it, or improper disconnection from its power source. Failure to do so could result in personal injury, patient injury, or damage to the power cord.
- Plug the unit into an appropriate power source. Use caution when working with electricity. Failure to do so could result in personal injury or equipment damage.
- Turn the **Airflow On/Off** switch to the **On** position, and set the **Comfort** knob to the level prescribed by the physician.

BACK

FLEXICAIR ECLIPSE® Low Airloss Therapy Unit Set-up Process

- Position the cushion on the bed frame, and secure the cushion using its straps located on each side. Failure to properly secure the cushion could result in patient injury due to falling.
- Install the coverlet on the mattress assembly.
- Place the air supply unit on either the footboard or the floor at the foot of the bed in a safe, out-of-the-way area to ensure that it is **not** in an area that could cause tripping of personnel.
- Connect the air supply hose to the air cushion and the air supply unit.

MORE

FLEXICAIR ECLIPSE® Low Airloss Therapy Unit Set-up Process (continued)

- Route the power cord to ensure that it is **not** in an area that could cause tripping of personnel, cutting of the power cord by equipment or casters rolling over it, or improper disconnection from its power source. Failure to do so could result in personal injury, patient injury, or damage to the power cord.
- Plug the unit into an appropriate power source. Use caution when working with electricity. Failure to do so could result in personal injury or equipment damage.
- Switch on the air supply unit.
- Obtain the patient's height and weight information, and enter it into the control panel.

BACK

Duo Deteq® Alternating Therapy System Set-up Process

- Position the head/torso section of the mattress on the bed frame, and secure it with the straps provided.
- Place the heel module at the foot end of the bed frame. Do **not** secure it at this time.
- Connect the color-coded air supply hoses between the two sections, and connect the side and center snaps.
- Roll the protective cover back over the heel zone, and secure it with the snaps provided on each side.
- Insert the Deteq™ Module Coil at the patient's left foot area of the mattress. To connect the Deteq™ Module Coil to the air supply enclosure, turn the collar clockwise.

MORE

Duo Deteq® Alternating Therapy System Set-up Process (continued)

- Connect the heel section hoses to the T-connectors on the air supply enclosure.
- Tuck the encasement flap under the foot section.
- Secure the heel section of the mattress to the bed frame using the straps provided, and attach the caregiver pendant to the footboard.
- Plug the unit into an appropriate power source. Use caution when working with electricity. Failure to do so could result in personal injury or equipment damage.
- Initially, a small blower rapidly inflates the mattress. When it shuts down, the Deteq™ Control System starts, and the caregiver pendant displays the system's status.

BACK

V-CUE® Dynamic Air Therapy® Unit Set-up Process

- Position the mattress assembly on the bed frame so its air hose connection is at the foot of the bed.
- Secure the mattress to the bed frame using straps. Failure to properly secure the mattress could result in patient injury due to falling.
- Connect the air supply hose and air supply cable to the mattress and the blower unit.
- Before installing the coverlet, check all electrical connections and air supply hoses for proper installation, and then place the coverlet.
- Pull out the hanger bracket on the blower unit, and hang the blower unit on the footboard of the bed.

MORE

V-CUE® Dynamic Air Therapy® Unit
Set-up Process (continued)

- Route the power cord to ensure that it is **not** in an area that could cause tripping of personnel, cutting of the power cord by equipment or casters rolling over it, or improper disconnection from its power source. Failure to do so could result in personal injury, patient injury, or damage to the power cord.
- Plug the power cord into the blower unit and an appropriate power source. Use caution when working with electricity. Failure to do so could result in personal injury or equipment damage.
- Secure the head of bed sensor between the mattress and the frame.
- If placing the unit on a frame from Hill-Rom, attach the siderail position sensors.

MORE

V-CUE® Dynamic Air Therapy® Unit Set-up Process (continued)

- At the foot end of the mattress, select a mattress width of either **ICU** or **Med/Surg** at the valve.
- Set the patient's height, weight, and rotation settings.
- Turn the unit on.

BACK

MAGNUM® II Bariatric Patient Care System Set-up Process

- Plug the power cords into an appropriate power source. Use caution when working with electricity. Failure to do so could result in personal injury or equipment damage.
- Switch on the main **Power** switches.
- Check all bed functions for proper operation.
- To prevent damage when the foot plate is lowered, always set the brakes and align the foot end casters with the frame.
- Zero the scale before placing a patient on the unit.
- Obtain the patient's height and weight information, and enter it into the control panel of the blower box assembly.

BACK

ZoneAire® Sleep Surface Set-up Process

- Position the bed, and set the brake.
- Plug the power cord into an appropriate power source. Use caution when working with electricity. Failure to do so could result in personal injury or equipment damage.
- Route the power cord away from traffic areas. Failure to do so could result in personal injury.
- Check all bed functions for proper operation.
- Zero the scale before placing the patient on the unit.

BACK

TotalCare SpO_2RT^{TM} Pulmonary Therapy System Set-up Process

- Position the unit, and set the brake.
- Plug the unit into an appropriate power source. Use caution when working with electricity. Failure to do so could result in personal injury or equipment damage.
- Route the power cord away from traffic areas. Failure to do so could result in personal injury.
- Zero the scale before placing the patient on the unit.

BACK

TotalCare SpO_2RT^{TM} Pulmonary Therapy System Rotation or Percussion/Vibration Module Installation Procedures

- Remove the headboard.
- Raise the head section to a minimum of 15°.
- At the head end of the unit, open the manifold door located under the sleep surface.
- Locate the appropriate slot for the required module: **Rotation** or **Percussion and Vibration**.
- Grasp the module by its handle, and then slide it into the manifold.
- Gently push on the module until it snaps into place. If the module is **not** completely engaged into the manifold, the handle will not fold into the box, and therapy will not start.

MORE

TotalCare SpO_2RT^{TM} Pulmonary Therapy System Rotation or Percussion/Vibration Module Installation Procedures (continued)

- Close the manifold door. If the module's handle is **not** folded into the module, the manifold door will not close.
- Install the headboard.
- Once the module is installed, the Graphical Caregiver Interface (GCI)® Control screen and the siderail indicate that the module is installed.
- Activate the pulmonary therapy by accessing the **Pulmonary** menu from the Graphical Caregiver Interface (GCI)® Control.

BACK

PRIME•AIRE® Therapy Surface Removal Process

- Turn the main circuit breaker on the lower right side of the control unit to the **Off** position.
- Unplug the unit from its power source. Use caution when working with electricity. Failure to do so could result in personal injury or equipment damage.
- Wipe down the cover, the air supply hoses, the power cord, and the controller's surface with a facility-approved disinfectant. Allow to air dry.
- Unplug the tubing assembly valves from the control unit.
- Place the control unit on the mattress assembly, fold up the mattress assembly, and store.

BACK

FLEXICAIR ECLIPSE® Low Airloss Therapy Unit Removal Process

- Turn the **On/Off** switch to the **Off** position.
- Remove the coverlet from the mattress, and place it in the agreed-upon location for pick up or laundry.
- Unplug the unit from its power source. Use caution when working with electricity. Failure to do so could result in personal injury or equipment damage.
- Wipe down the blower unit, air supply hose, and mattress assembly with a facility-approved disinfectant. Allow to air dry.

MORE

FLEXICAIR ECLIPSE® Low Airloss Therapy Unit Removal Process (continued)

- Disconnect hose assembly from blower unit, but leave the hose assembly in the mattress assembly to allow air to escape.
- Start at the head end of the mattress, and roll it up.
- Once the mattress assembly is rolled up, remove the air supply hose.
- For storage, place the air supply hose and the power cord in the mattress assembly.
- Store the blower unit and the mattress assembly in the agreed-upon location.

BACK

ACUCAIR® Low Airloss Therapy Unit Removal Process

- Turn the **On/Off** switch to the **Off** position.
- Remove the coverlet from the mattress, and place it in the agreed-upon location for pick up or laundry.
- Unplug the unit from its power source. Use caution when working with electricity. Failure to do so could result in personal injury or equipment damage.
- Wipe down the blower, the air supply hose, and the mattress assembly with a facility-approved disinfectant. Allow to air dry.
- Disconnect the hose assembly from the blower and the mattress assembly.
- Completely deflate the mattress assembly, and store it, its straps, the blower, and the hose assembly in the agreed-upon location.

BACK

Products Set-up Procedures Between Patient Procedures Troubleshooting Exit

V-CUE® Dynamic Air Therapy® Unit Removal Process

- Remove the coverlet from the mattress, and place it in the agreed-upon location.
- Wipe down the unit with a facility-approved disinfectant. Allow to air dry.
- Verify that the unit is running. Press the **Maximum Inflate** button, and silence the alarm if necessary.
- Disconnect the air supply data cable from the blower unit. An error code **may** appear on the control panel display.
- Remove the filter cover and the filter from the blower unit.
- Disconnect the air supply hose from the blower unit, and insert it into the filter cover intake. Verify that cushion deflation begins.
- Allow approximately 5 minutes for the cushions to completely deflate.

MORE

V-CUE® Dynamic Air Therapy® Unit Removal Process (continued)

- Turn off the **Maximum Inflate** button, and then press the **Therapy On/Off** button.
- Unplug the unit from its power source. Use caution when working with electricity. Failure to do so could result in personal injury or equipment damage.
- Disconnect the air supply hose from the filter cover intake, and install the filter and the filter cover.
- Disconnect the air supply hose from the mattress assembly.
- Remove the siderail position sensors from the siderails, and lay them on top of the mattress assembly.
- Unfasten the straps of the mattress assembly, and tri-fold and store it with the blower unit and air supply hose in the agreed-upon location.

BACK

Duo Deteq® Alternating Therapy System Removal Process

- Using the caregiver pendant, place the system into Continuous Therapy Mode.
- Unfasten the heel module straps, and remove the encasement from under the heel module.
- Unsnap the encasement covering the air filter door located on the patient's right-hand side of the mattress.
- Open the filter door, and turn the **Vacuum Mode** lever counterclockwise.
- Allow 7 to 10 minutes for the mattress to completely deflate.
- Unfasten the rest of the straps that hold the mattress to the bed frame.
- At the patient's left side of the heel module, undo the Deteq™ Module Coil from the air supply enclosure.

MORE

Duo Deteq® Alternating Therapy System Removal Process (continued)

- Disconnect the heel module hose connections.
- Roll the Duo Deteq® Alternating Therapy System's cover back, disconnect the hose, and unfasten the snaps between the main mattress and the heel section.
- Unplug the system from its power source. Use caution when working with electricity. Failure to do so could result in personal injury or equipment damage.
- Return the **Vacuum Mode** lever to its original position, secure the filter door, and then snap the encasement.
- Raise the **CPR** lever, press the **CPR** release button, and then lower the **CPR** lever.

MORE

Duo Deteq® Alternating Therapy System Removal Process (continued)

- Place the caregiver pendant and the power cord on the heel module, and unsnap the protective heel cover. Zip the cover up over the caregiver pendant and the power cord.
- Using the heel module securing strap, secure the top of the protective cover. Remove the heel module from frame.
- Fold the head/torso section inward so that its cover is on the inside.
- Secure the head/torso section using the wide nylon strap, and tighten it securely.
- Remove the head/torso section from the bed frame, and store in the agreed-upon location.

BACK

MAGNUM® II Bariatric Patient Care System Removal Process

- Remove the coverlet from the mattress and the lymph cushion, and place it in the agreed-upon location.
- Unplug the blower unit and the frame from their power sources. Use caution when working with electricity. Failure to do so could result in personal injury or equipment damage.
- Wipe down the frame, the air mattress, the blower unit, the hose, and the power cords with a facility-approved disinfectant. Allow to air dry.
- Switch the main **Power** switch on the blower unit and the frame to the **Off** position.

BACK

ZoneAire® Sleep Surface Removal Process

- Unplug the unit from its power source. Use caution when working with electricity. Failure to do so could result in personal injury or equipment damage.

- Wipe down the frame, mattress, and power cord with a facility-approved disinfectant. Allow to air dry.

BACK

TotalCare SpO_2RT^{TM} Pulmonary Therapy System Removal Process

- Unplug the unit from its power source. Use caution when working with electricity. Failure to do so could result in personal injury or equipment damage.

- Wipe down the frame, mattress, and power cord with a facility-approved disinfectant. Allow to air dry.

BACK

TotalCare SpO_2RT^{TM} Pulmonary Therapy System Rotation or Percussion/Vibration Module Removal Procedures

- Using the Graphical Caregiver Interface (GCI)® Control, turn off the pulmonary therapy by selecting **Normal Mode**.
- Raise the head section to a minimum of 15°.
- Remove the headboard.
- At the head end of the unit, open the manifold door located under the sleep surface.
- Grasp the module's handle, and pull downward to release the module from its locked position.

MORE

TotalCare SpO_2RT^{TM} Pulmonary Therapy System Rotation or Percussion/Vibration Module Removal Procedures (continued)

- Remove the module from the manifold. Once the module is removed, the Graphical Caregiver Interface (GCI)® Control and the siderail indicate that the module is removed.
- Close the manifold door.
- Install the headboard.

BACK

PRIME•AIRE® Therapy Surface Between Patient Procedures

- Inspect the air supply case, power cord, and plug for damage, and wipe them down with a facility-approved disinfectant. Allow to air dry.
- Wipe down the mattress with a facility-approved disinfectant, and inspect the hoses and fittings for leaks or damage. If damage is found, contact your Hill-Rom representative.
- With the power **on**, push and hold the **Patient Weight** button. Ensure that all of the lights work and the alarm activates.
- With the power **on**, push and hold the **Maximum Inflate** button. Ensure that all of the lights work and the alarm activates.

BACK

Products | Set-up Procedures | Removal Procedures | Troubleshooting | Exit

ACUCAIR® Continuous Airflow Therapy System Between Patient Procedures

- Wipe down the blower unit, hose assembly, power cord, and coverlets with a facility-approved disinfectant. Allow to air dry.
- Inspect the blower unit, hose assembly, and power cord for any damage or cuts. If damage is found, contact your Hill-Rom representative.
- Remove the filter housing from the side of the blower unit, and clean the filter.

BACK

Products Set-up Procedures Removal Procedures Troubleshooting Exit

V-CUE® Dynamic Air Therapy® Unit Between Patient Procedures

- Wipe down the blower unit, hose assembly, power cord, and coverlets with a facility-approved disinfectant. Allow to air dry. If necessary, replace the coverlet.
- Inspect the blower unit, hose assembly, and power cord for any damage or cuts. If damage is found, contact your Hill-Rom representative.
- Remove the filter housing from the side of the blower unit, and clean the filter. If the filter is wet or damaged, contact your Hill-Rom representative.

BACK

FLEXICAIR ECLIPSE® Low Airloss Therapy Unit Between Patient Procedures

- Wipe down the blower unit, hose assembly, and power cord with a facility-approved disinfectant. Allow to air dry.
- Inspect the blower unit, hose assembly, and power cord for any damage or cuts. If damage is found, contact your Hill-Rom representative.
- Wipe down the complete mattress assembly with a facility-approved disinfectant. Allow to air dry.
- Remove the filter housing from the side of the blower unit, and clean the filter. If the filter is wet or damaged, contact your Hill-Rom representative.

BACK

Duo Deteq® Alternating Therapy System Between Patient Procedures

- Wipe down the cover with a facility-approved disinfectant. Allow to air dry.

BACK

MAGNUM® II Bariatric Patient Care System Between Patient Procedures

- Wipe down the frame, blower unit, hose assembly, and power cords with a facility-approved disinfectant. Allow to air dry.
- Inspect the frame, blower unit, hose assembly, and power cords for any damage or cuts. If damage is found, contact your Hill-Rom representative.
- Wipe down the complete air mattress assembly with a facility-approved disinfectant. Allow to air dry.
- Remove the filter housing from the side of the blower unit, and clean the filter. If the filter is wet or damaged, contact your Hill-Rom representative.

BACK

ZoneAire® Sleep Surface Between Patient Procedures

- Wipe down the frame, mattress, and power cord with a facility-approved disinfectant. Allow to air dry.
- Inspect the frame, mattress, and power cord for any damage, cuts, or missing parts. If damage is found, of if parts are missing, contact your Hill-Rom representative.
- Plug the unit into an appropriate power source. Use caution when working with electricity. Failure to do so could result in personal injury or equipment damage.
- At the foot end of the unit, ensure that the **Service Required** light is **not** illuminated. If the **Service Required** light **is** illuminated, contact your Hill-Rom representative.

BACK

TotalCare SpO_2RT^{TM} Pulmonary Therapy System Between Patient Procedures

- Wipe down the frame, mattress, and power cord with a facility-approved disinfectant. Allow to air dry.
- Inspect the frame, mattress, and power cord for any physical damage or missing parts. If damage is found, or if parts are missing, contact your Hill-Rom representative.
- Plug the unit into an appropriate power source. Use caution when working with electricity. Failure to do so could result in personal injury or equipment damage.
- To clear the previous patient's information and zero the scale on the Graphical Caregiver Interface (GCI)® Control, hold **GO TO Main Menu**, and then select **Bed setup/Reset**.

BACK

Products | Set-up Procedures | Removal Procedures | Troubleshooting | Exit

PRIME•AIRE® Therapy Surface Troubleshooting Procedures

SYMPTOMS

- The unit does not operate.
- The mattress does not inflate.

BACK

Products | Set-up Procedures | Removal Procedures | Between Patient Procedures | Exit

ACUCAIR® Continuous Airflow Therapy System Troubleshooting Procedures

SYMPTOMS

- The unit does not operate.
- The mattress does not inflate.

BACK

Products | Set-up Procedures | Removal Procedures | Between Patient Procedures | Exit

FLEXICAIR ECLIPSE®
Low Airloss Therapy Unit
Troubleshooting Procedures

SYMPTOMS

- The unit does not operate.
- The mattress does not inflate.

BACK

V-CUE® Dynamic Air Therapy® Unit Troubleshooting Procedures

SYMPTOMS

- The unit does not operate.
- The mattress does not inflate.

BACK

Duo Deteq® Alternating Therapy System Troubleshooting Procedures

SYMPTOMS

- The unit does not operate.
- The mattress does not inflate.

BACK

Products | Set-up Procedures | Removal Procedures | Between Patient Procedures | Exit

MAGNUM® II Bariatric Patient Care System Troubleshooting Procedures

SYMPTOMS

- The unit does not operate.
- The mattress does not inflate.

BACK

Products | Set-up Procedures | Removal Procedures | Between Patient Procedures | Exit

ZoneAire® Sleep Surface Troubleshooting Procedures

SYMPTOMS

- The unit does not operate.
- The mattress does not inflate.

BACK

Products | Set-up Procedures | Removal Procedures | Between Patient Procedures | Exit

TotalCare SpO_2RT^{TM} Pulmonary Therapy System Troubleshooting Procedures

SYMPTOMS

- The unit does not operate.
- The mattress does not function properly.

BACK

Products | Set-up Procedures | Removal Procedures | Between Patient Procedures | Exit

PRIME•AIRE® Therapy Surface

—The unit does not operate

- Check the plug and power cord to ensure that they are in good condition. If damage is found, contact your Hill-Rom representative.

- Check the main circuit breaker's **On/Off** switch, and ensure that it moves freely and locks positively in each position. If the switch does **not** operate properly, contact your Hill-Rom representative.

BACK

ACUCAIR® Continuous Airflow System

—The unit does not operate

- Check the plug and the power cord to ensure that they are in good condition. If damage is found, contact your Hill-Rom representative.

- Check the main circuit breaker's **On/Off** switch, and ensure that it moves freely and locks positively in each position. If the switch does **not** operate properly, contact your Hill-Rom representative.

BACK

FLEXICAIR ECLIPSE® Low Airloss Therapy Unit

—The unit does not operate

- Check the plug and the power cord to ensure that they are in good condition. If damage is found, contact your Hill-Rom representative.

- Check the main circuit breaker's **On/Off** switch, and ensure that it moves freely and locks positively in each position. If the switch does **not** operate properly, contact your Hill-Rom representative.

BACK

V-CUE® Dynamic Air Therapy® Unit

—The unit does not operate

- Check the plug and the power cord to ensure that they are in good condition. If damage is found, contact your Hill-Rom representative.
- Ensure that the green indicator light on the side of the blower unit is on.
- Check the hose connection between the air supply unit and the mattress assembly.
- At start up, ensure that the following occur: the **Hill-Rom** logo screen appears for 5 to 8 seconds, the blower unit then beeps three times, the screen goes blank, and the unit is ready. If otherwise, or if error codes appear, contact your Hill-Rom representative.

BACK

Duo Deteq® Alternating Therapy System

—The unit does not operate

- Check the plug and the power cord to ensure that they are in good condition. If damage is found, contact your Hill-Rom representative.
- Verify that the wall outlet voltage is correct.
- Check the caregiver hand pendant for the proper operation of the **On/Off** indicator light. If the indicator is **green**, the unit is on. If the indicator is **red**, the unit is off and in Transport Mode.

BACK

MAGNUM® II Bariatric Patient Care System

—The unit does not operate

- Ensure that the **On/Off** switch on the electronics box is in the **On** position.
- Verify that the bed is plugged into an appropriate power source.
- Verify that the hand control is securely plugged into the electronics box.
- Ensure that you apply enough pressure on the hand control to perform the function.
- Ensure that the **Hi-Low/Lymp** switch on the electronics box is in the correct position for the desired function.

BACK

ZoneAire® Sleep Surface

—The unit does not operate

- Ensure that the unit is plugged into an appropriate power source.
- At the unit's foot end, verify that the patient's lockout functions are **not** engaged.
- At the unit's foot end, ensure that the **Service Required** light is **not** illuminated. If it **is** illuminated, contact your Hill-Rom representative.

BACK

Products | Set-up Procedures | Removal Procedures | Between Patient Procedures | Exit

TotalCare SpO_2RT^{TM} Pulmonary Therapy System

—The unit does not operate

- Ensure that the bed is plugged into an appropriate power source.
- Ensure that the patient's lockout functions are **not** engaged.

BACK

Products | Set-up Procedures | Removal Procedures | Between Patient Procedures | Exit

PRIME•AIRE® Therapy Surface —The mattress does not inflate

- Ensure that the **On/Off** switch is in the **On** position.
- Check the hose connectors at the bottom of the power unit to ensure that they are properly connected.
- Check the mattress for any cuts or tears. If damage is found, contact your Hill-Rom representative.

BACK

ACUCAIR® Continuous Airflow Therapy System

—The mattress does not inflate

- To verify that the unit is on, ensure that the **On/Off** switch is in the **On** position.
- Check the hose connection on the mattress and blower to ensure that both ends of the hose are properly connected.
- Check the mattress for any cuts or tears. If damage is found, contact your Hill-Rom representative.

BACK

Products | Set-up Procedures | Removal Procedures | Between Patient Procedures | Exit

FLEXICAIR ECLIPSE®

Low Airloss Therapy Unit

—The mattress does not inflate

- To verify that the unit is on, ensure that the **On/Off** switch is in the **On** position.
- Check the hose connection on the mattress and blower to ensure that both ends of hose are properly connected.
- If only one section of the mattress deflates, check the appropriate cushion internal hose connector for proper connection.
- Check the mattress for any cuts or tears. If damage is found, contact your Hill-Rom representative.

BACK

V-CUE® Dynamic Air Therapy® Unit

—The mattress does not inflate

- Ensure that the unit is on and functioning properly. If necessary, go to “The unit does not turn on.”
- Check the air supply hose and data cable connector for proper and secure connection.

BACK

Duo Deteq® Alternating Therapy System

—The mattress does not inflate

- Check the plug and the power cord to ensure that they are in good condition. If damage is found, contact your Hill-Rom representative.
- Verify that the wall outlet voltage is correct. If not, contact your Hill-Rom representative.
- Check the caregiver hand pendant's **On/Off** indicator light. If the indicator is **green**, the unit is on. If the indicator is **red**, the unit is off and in Transport Mode.

BACK

FLEXICAIR ECLIPSE *Ultra*® Low Airloss Therapy Unit

—The mattress does not inflate

- To verify that the unit is on, ensure that the **On/Off** switch is in the **On** position.
- Check the hose connection at the mattress and the blower to ensure that both ends are properly connected.
- If only one section of the mattress deflates, check the appropriate cushion hose connector for proper connection.
- Check the mattress for any cuts or tears. If damage is found, contact your Hill-Rom representative.

BACK

ZoneAire® Sleep Surface

— The mattress does not inflate

- Ensure that the bed is plugged into an appropriate power source. Use caution when working with electricity. Failure to do so could result in personal injury or equipment damage.
- Check all hose and hose connectors for proper seating and connection.
- At the unit's foot end, ensure the **Service Required** light is **not** illuminated. If the light **is** illuminated, contact your Hill-Rom representative.

BACK

TotalCare SpO_2RT^{TM} Pulmonary Therapy System

—The mattress does not function properly

- Check the hose connectors at the head of the mattress, and verify that they seat and connect properly to the frame connectors.
- Verify that the therapy modules are installed by checking the indicator lights on the patient's left-hand siderail.
- Check the therapy modules to confirm that they seat properly.

BACK

Products | Set-up Procedures | Removal Procedures | Between Patient Procedures | Exit

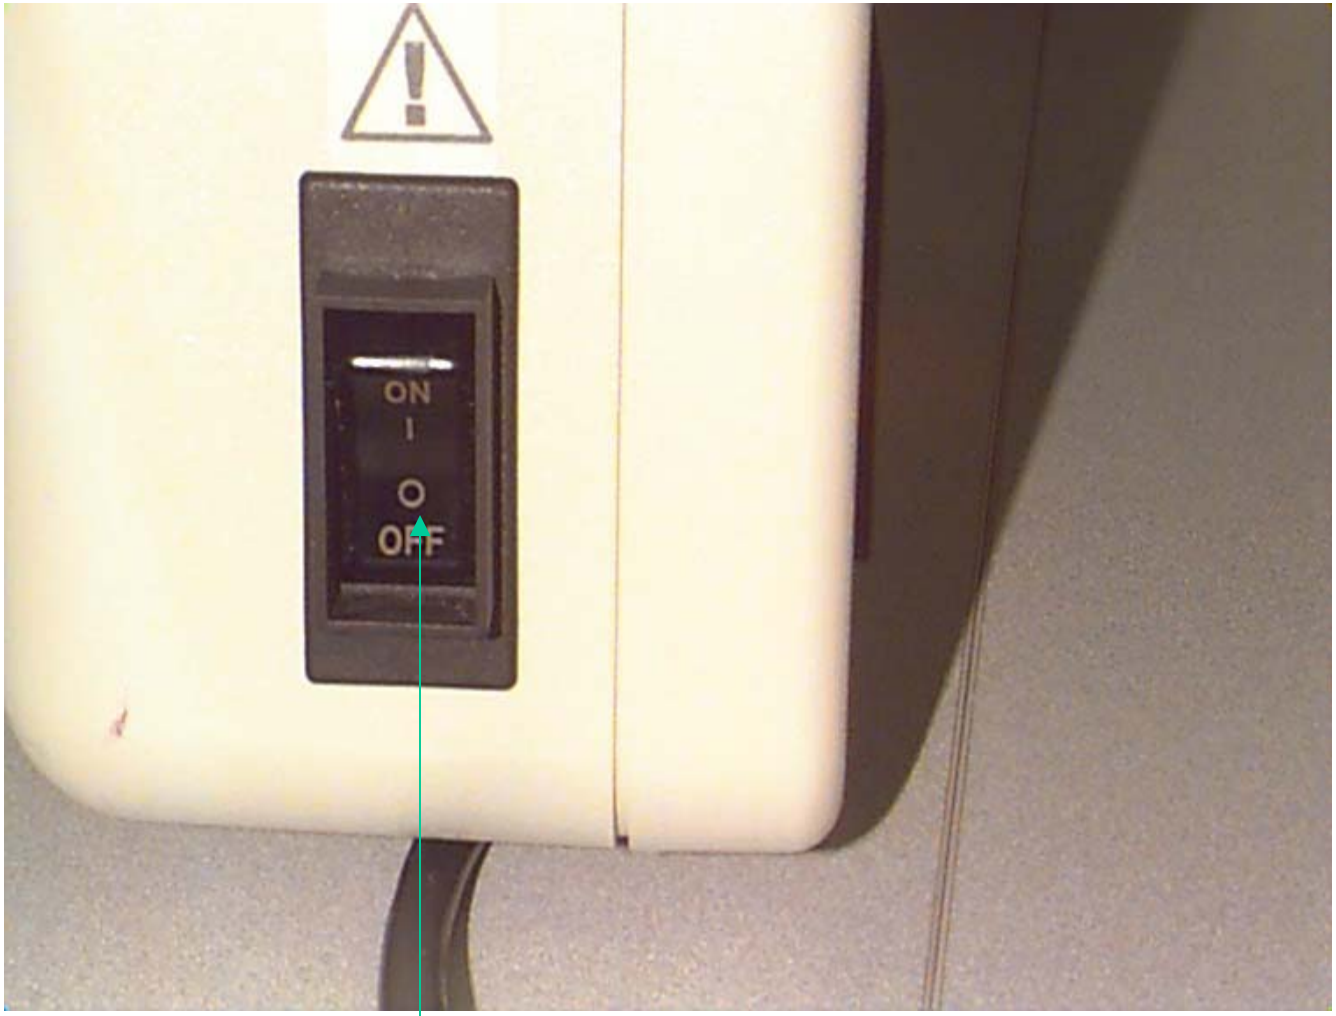

Ensure that the **On/Off** switch works properly and locks correctly in each position. If it does **not** work properly, contact your Hill-Rom representative.

BACK

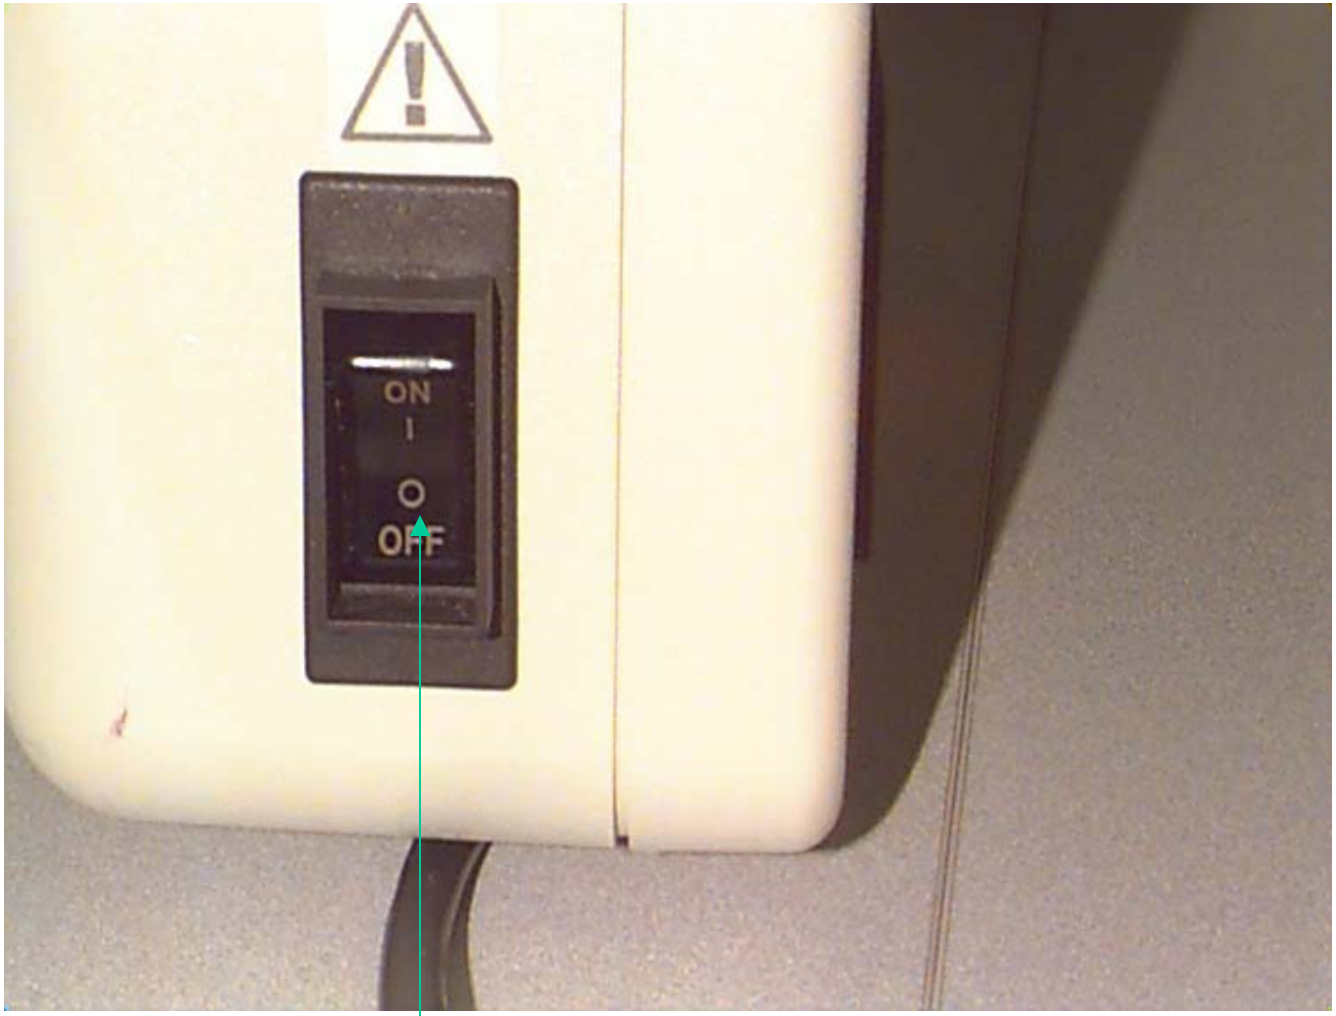

Ensure that the **On/Off** switch works properly and locks correctly in each position. If it does **not** work properly, contact your Hill-Rom representative.

BACK

Products | Set-up Procedures | Removal Procedures | Between Patient Procedures | Troubleshooting | Exit

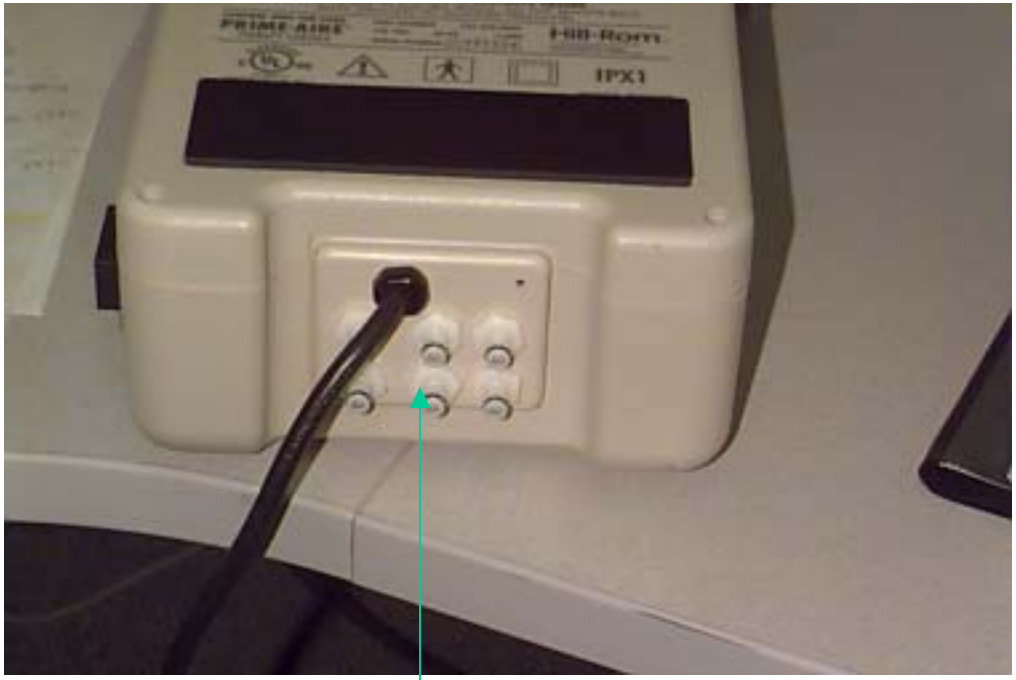

Ensure that all connectors are in good shape and not cracked or broken. If damage is found, contact your Hill-Rom representative.

BACK

Products | Set-up Procedures | Removal Procedures | Between Patient Procedures | Troubleshooting | Exit

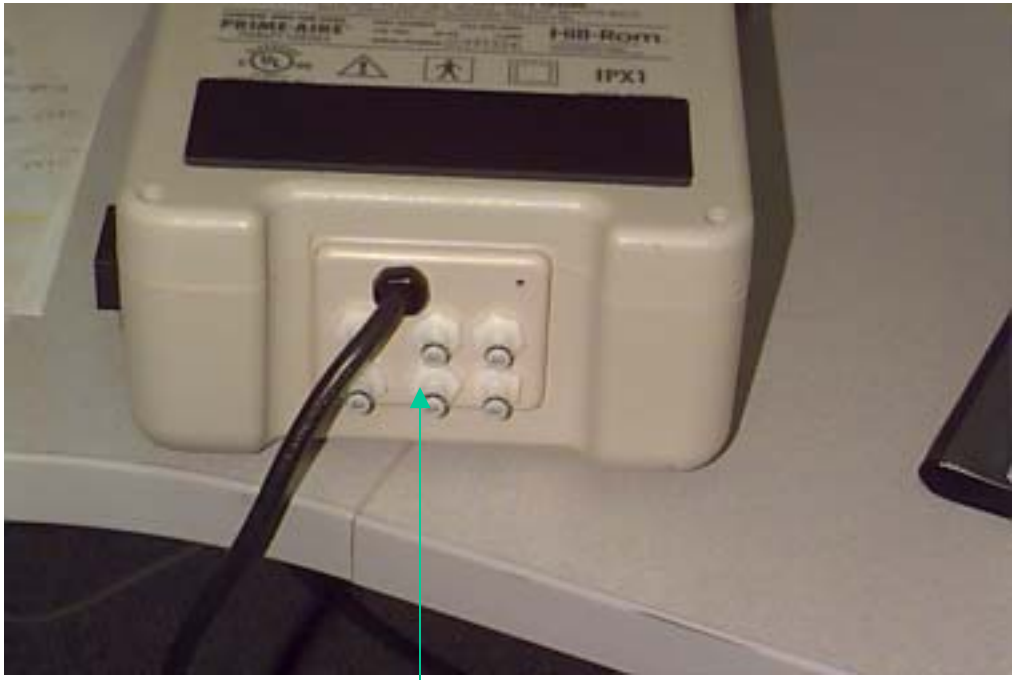

Ensure that all connectors are in good shape and not cracked or broken, and that the hoses attach properly. If damage is found, contact your Hill-Rom representative.

BACK

Products | Set-up Procedures | Removal Procedures | Between Patient Procedures | Troubleshooting | Exit

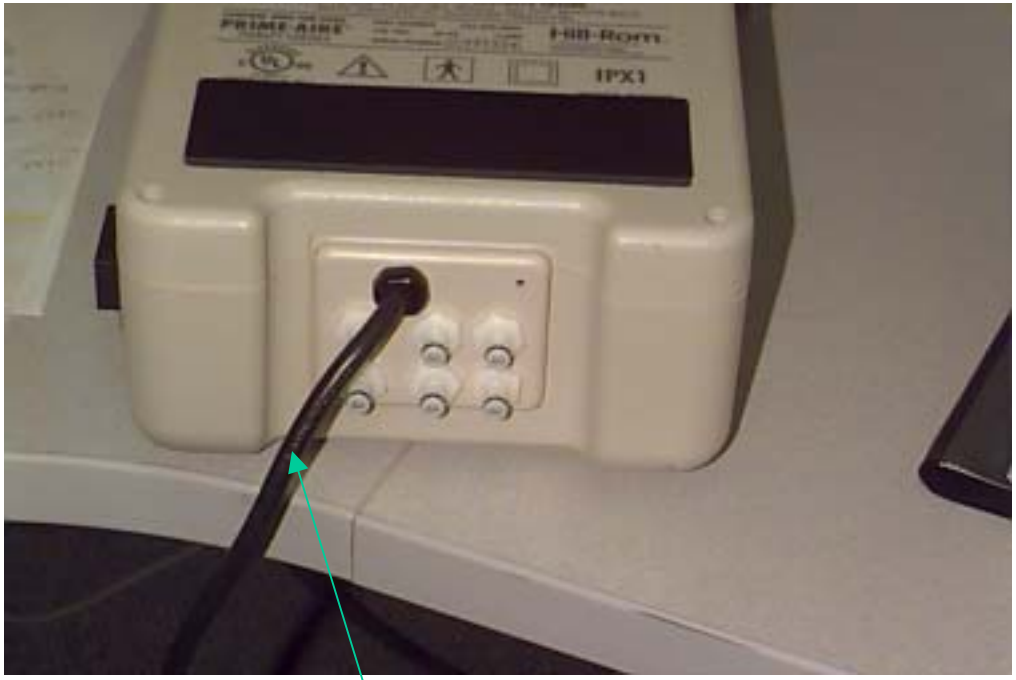

Inspect the plug and the power cord for any damage. If damage is found, contact your Hill-Rom representative. Use caution when working with electricity. Failure to do so could result in personal injury or equipment damage.

BACK

Products | Set-up Procedures | Removal Procedures | Between Patient Procedures | Troubleshooting | Exit

Ensure that the **On/Off** switch locks positively in either the **On** or **Off** position. If the switch does **not** operate properly, contact your Hill-Rom representative.

BACK

Ensure that the hose properly attaches to the mattress assembly.

Ensure that the hose properly attaches to the air supply unit.

BACK

Ensure that the **On/Off** switch locks positively in either the **On** or **Off** position. If the switch does **not** operate properly, contact your Hill-Rom representative.

BACK

Products Set-up Procedures Removal Procedures Between Patient Procedures Troubleshooting Exit

Check the power cord and the plug for any damage. If damage is found, contact your Hill-Rom representative.
Use caution when working with electricity. Failure to do so could result in personal injury or equipment damage.

BACK

Check the power cord and the plug for any damage. If damage is found, contact your Hill-Rom representative. Use caution when working with electricity. Failure to do so could result in personal injury or equipment damage.

BACK

Ensure that the **On/Off** switch locks positively in either the **On** or **Off** position. If the switch does **not** operate properly, contact your Hill-Rom representative.

BACK

Products | Set-up Procedures | Removal Procedures | Between Patient Procedures | Troubleshooting | Exit

Ensure that the **On/Off** switch locks positively in either the **On** or **Off** position. If the switch does **not** operate properly, contact your Hill-Rom representative.

BACK

Products | Set-up Procedures | Removal Procedures | Between Patient Procedures | Troubleshooting | Exit

Ensure that the **On/Off** switch locks positively in either the **On** or **Off** position. If the switch does **not** operate properly, contact your Hill-Rom representative.

BACK

Products | Set-up Procedures | Removal Procedures | Between Patient Procedures | Troubleshooting | Exit

Ensure that the hose properly attaches to the air supply unit.

Ensure that the hose properly attaches to the mattress assembly.

BACK

If only one section of the mattress is deflated, check the appropriate cushion internal hose connectors located on patient's left-hand side of the mattress for proper connection. If the problem persists, contact your Hill-Rom representative.

BACK

Ensure that the hose properly attaches to the air supply unit.

Ensure that the hose properly attaches to the mattress assembly.

BACK

Products | Set-up Procedures | Removal Procedures | Between Patient Procedures | Troubleshooting | Exit

Check the power cord and the plug for any damage. If damage is found, contact your Hill-Rom representative. Use caution when working with electricity. Failure to do so could result in personal injury or equipment damage.

BACK

If the unit is on, the green indicator light is on.

BACK

Check the air supply hose and the data cable connector for secure connection on the blower unit and the mattress assembly.

BACK

Products | Set-up Procedures | Removal Procedures | Between Patient Procedures | Troubleshooting | Exit

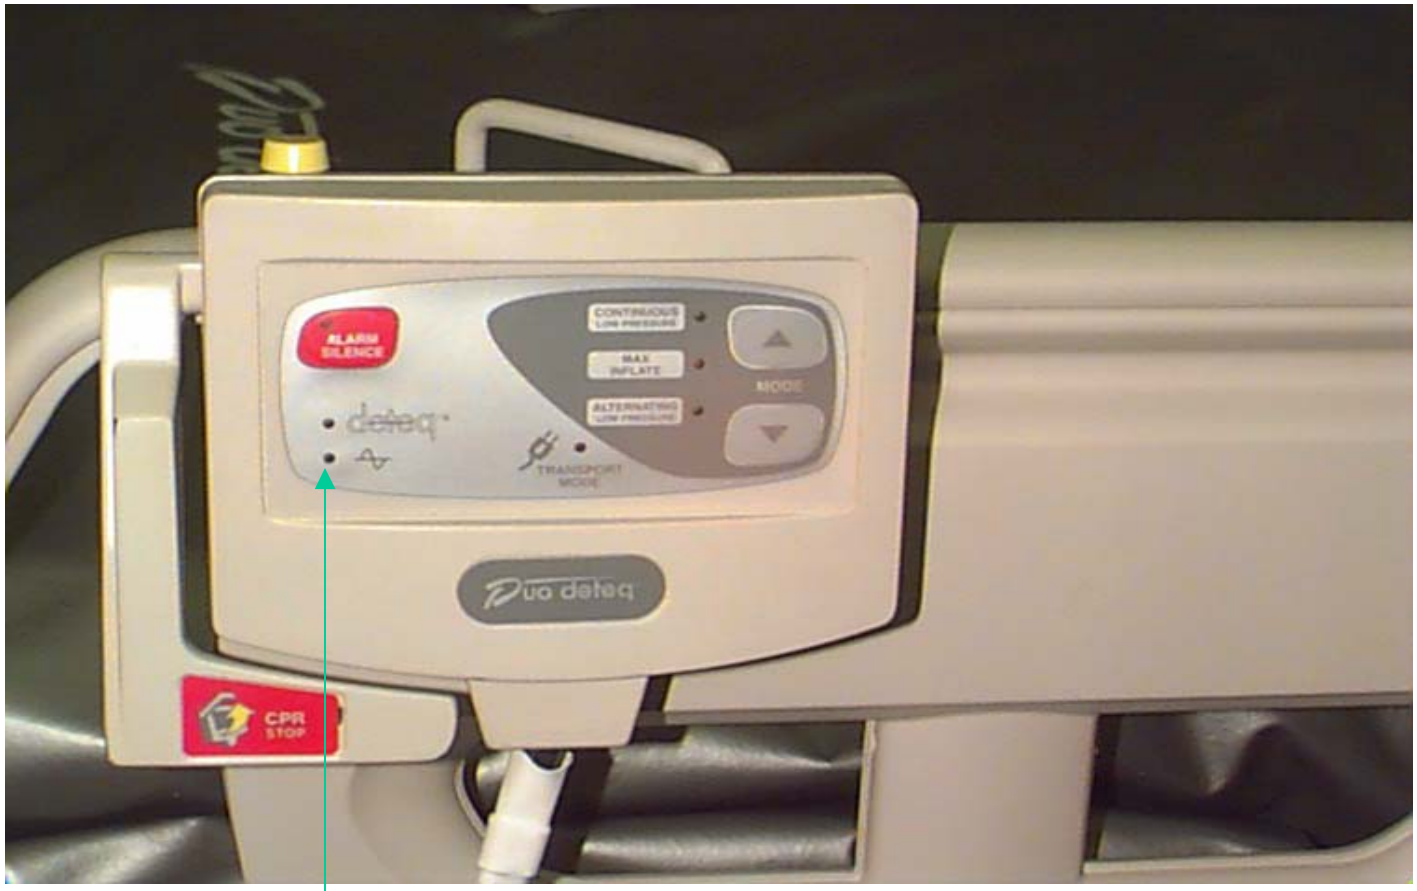

If the unit has power, the indicator is green.
If the unit is unplugged for transport, the indicator is red.

BACK

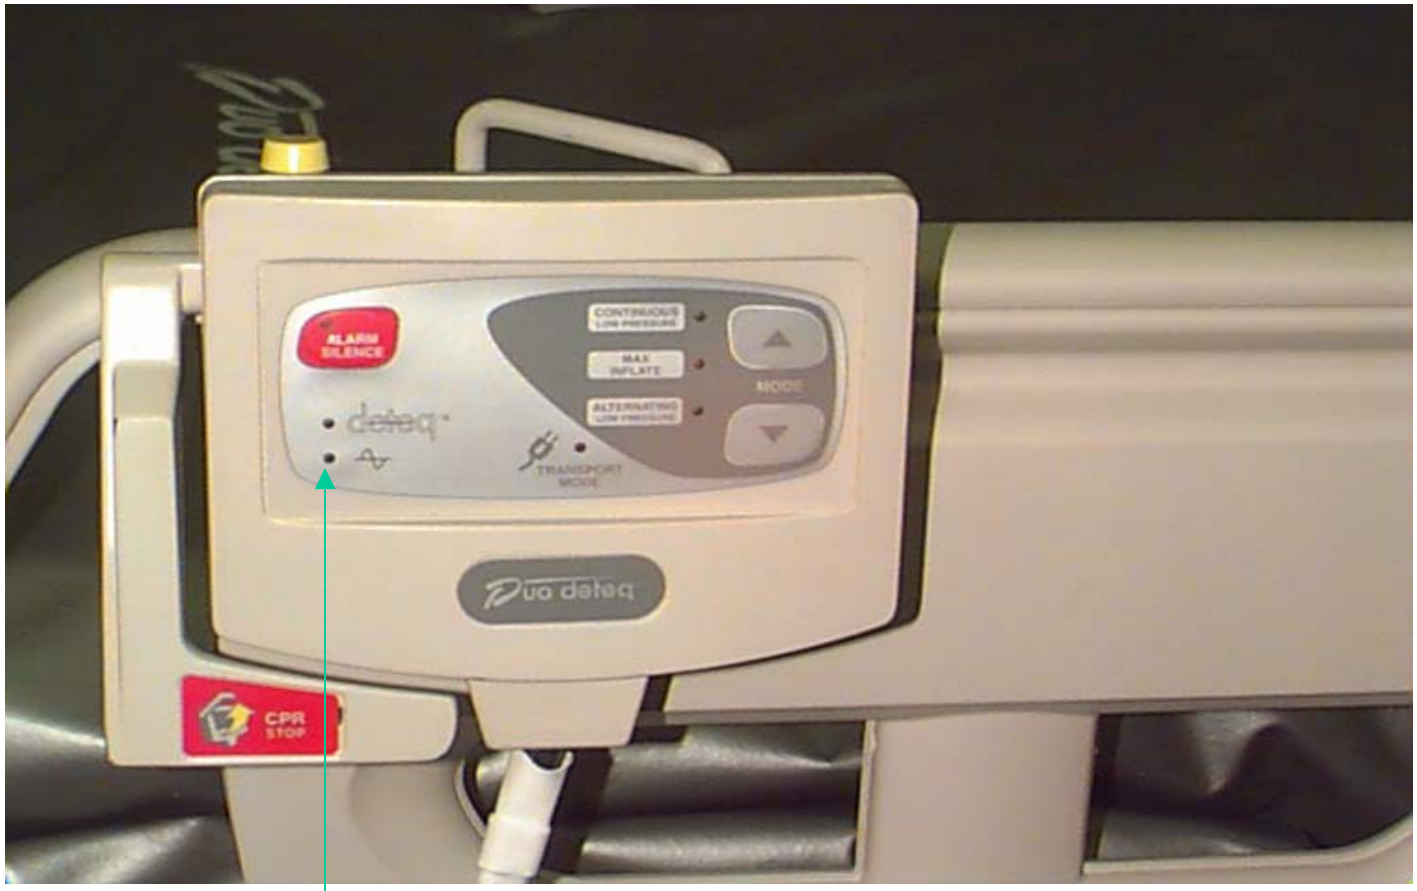

If the unit has power, the indicator is green.
If the unit is unplugged for transport, the indicator is red.

BACK

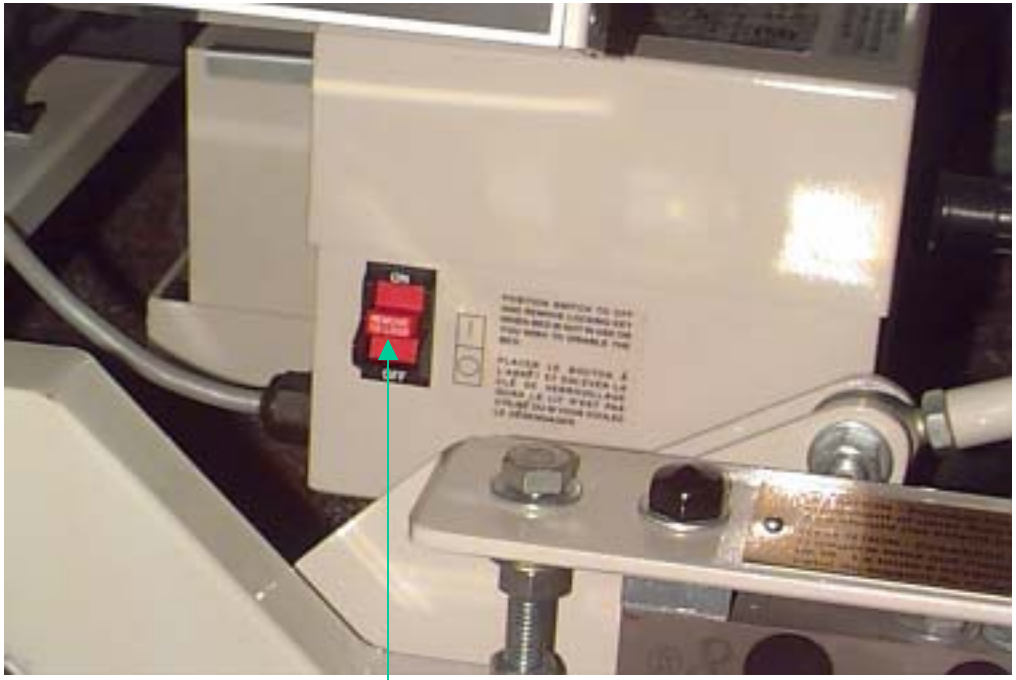

Ensure that the **On/Off** switch, located on patient's right-hand, head-end side, is in the **On** position.

BACK

Ensure that the bed is plugged into an appropriate power source. Use caution when working with electricity. Failure to do so could result in personal injury or equipment damage.

BACK

Ensure that the hand pendant is securely plugged into the electronics box.

BACK

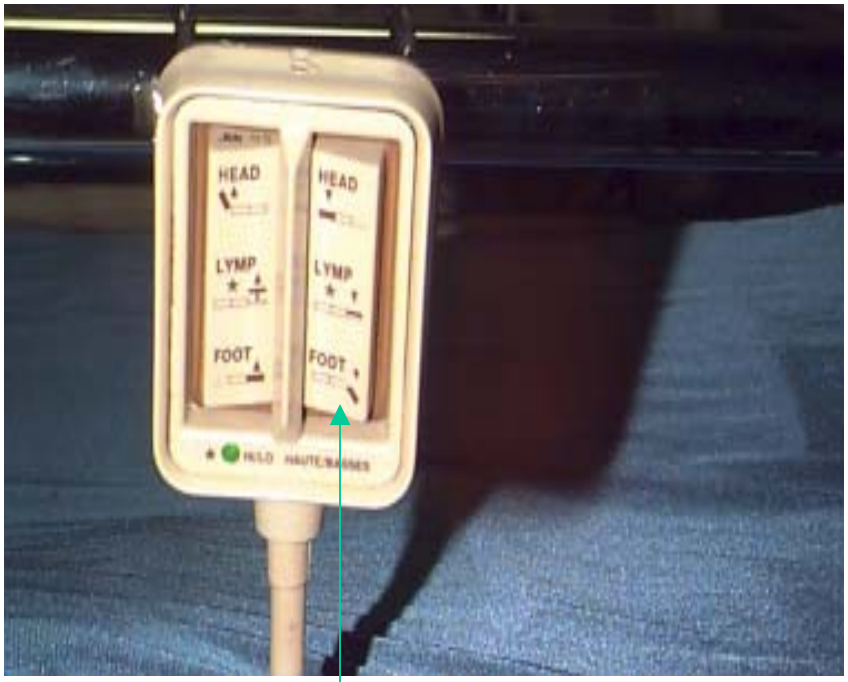

Ensure that you apply enough pressure on the hand control button to perform the function.

BACK

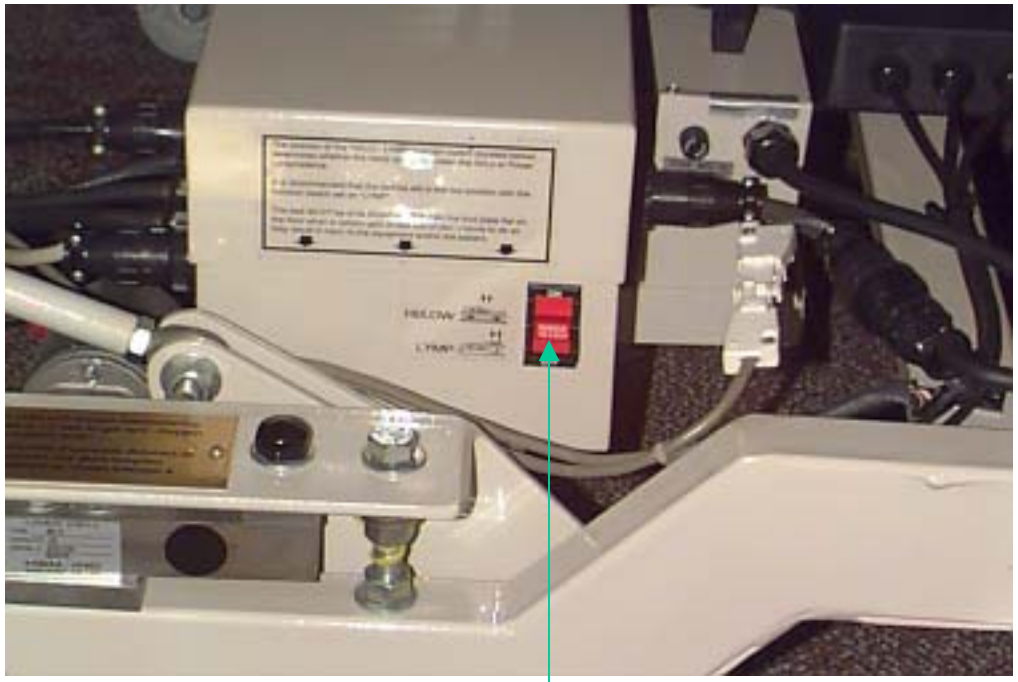

Ensure that the **Hi-Low/Lymp** function switch, located on the patient's left-hand, head-end side, on the electronics box is in the correct position for the desired function. Use caution when working under a raised section of the bed. Failure to do so could result in personal injury.

BACK

Ensure that the bed is plugged into an appropriate power source. Use caution when working with electricity. Failure to do so could result in personal injury or equipment damage.

BACK

Ensure that the bed is plugged into an appropriate power source. Use caution when working with electricity. Failure to do so could result in personal injury or equipment damage.

BACK

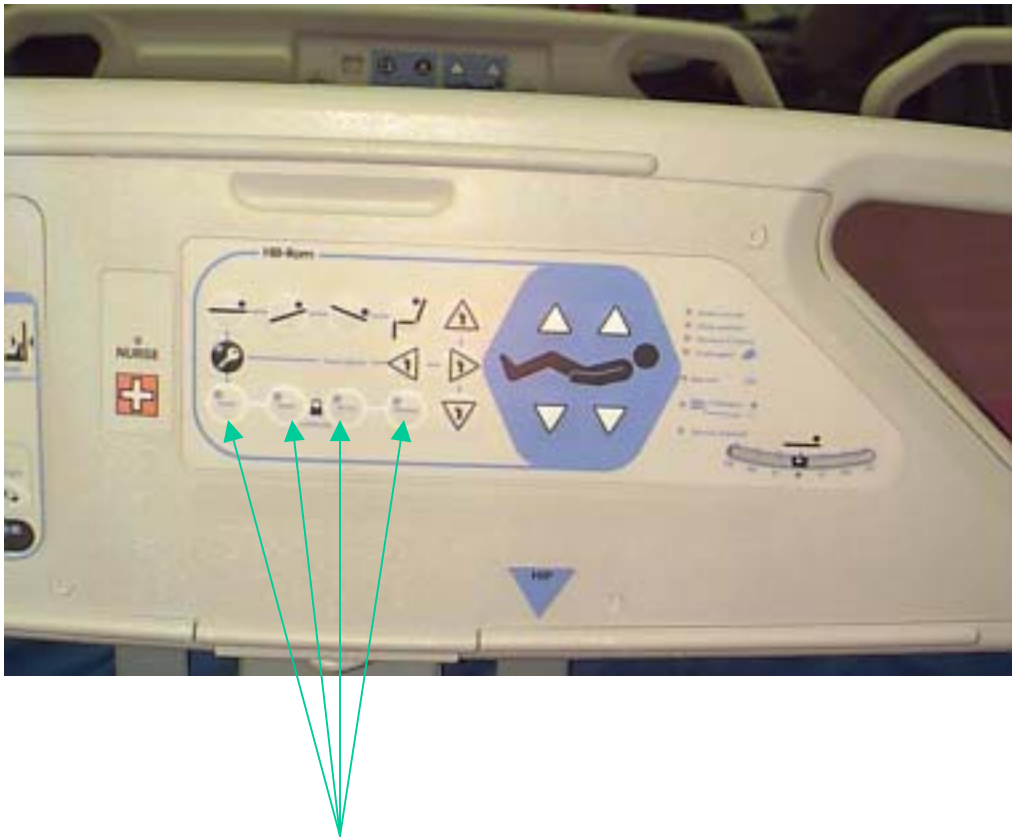

Ensure that the patient’s lockout functions are not engaged.

BACK

Products Set-up Procedures Removal Procedures Between Patient Procedures Troubleshooting Exit

Check the hose connectors at the head of the mattress, and ensure that they seat and connect properly to the frame connectors. Use caution when working near raised sections of the unit. Failure to do so could result in personal injury.

BACK

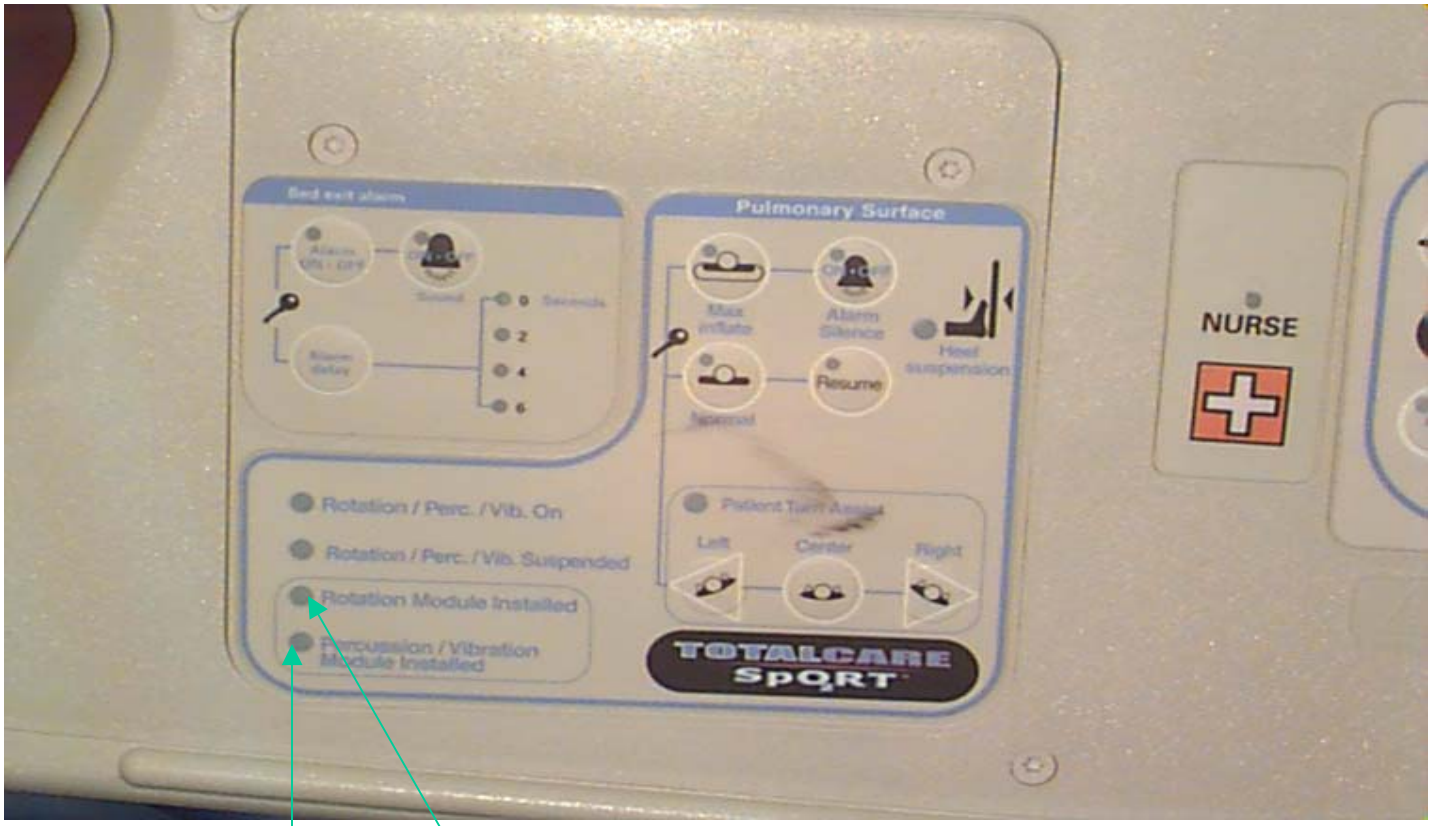

To verify that the therapy modules are installed, check the indicator lights on patient's left-hand siderail.

BACK

Products | Set-up Procedures | Removal Procedures | Between Patient Procedures | Troubleshooting | Exit

At the unit’s foot end, ensure that the patient’s lockout functions are **not** engaged.

BACK

Products Set-up Procedures Removal Procedures Between Patient Procedures Troubleshooting Exit

At the unit’s foot end, ensure that the **Service Required** light is **not** illuminated. If it **is** illuminated, contact your Hill-Rom representative.

BACK

Products | Set-up Procedures | Removal Procedures | Between Patient Procedures | Troubleshooting | Exit

At the unit’s foot end, ensure that the **Service Required** light is **not** illuminated. If it **is** illuminated, contact your Hill-Rom representative.

BACK

Products Set-up Procedures Removal Procedures Between Patient Procedures Troubleshooting Exit